



THE ORIGINAL

# ROMAN FOLD SHADE HOW TO MEASURE


## INSIDE MOUNT

**Measure width** at inside top, middle and bottom of window opening with a steel tape. Use the narrowest width measurement (round down to the nearest 1/8").

**Measure length** from inside top of window to bottom sill and provide measurements (round down to the nearest 1/8"). No deductions will be taken from length measurement.

STANDARD FEATURES UNLESS OTHERWISE SPECIFIED:  
• Headerboards are pre-drilled bottom to top for easy installation. Mounting screws are provided

DESIGN NOTE:  
For operating clearance, it's necessary to weave inside mount shades 1/2" narrower than the inside window measurement (1/4" for each side).  
**On order form, please state if you "have taken 1/2" deduction" or "exact window opening, CONRAD to take deductions."**

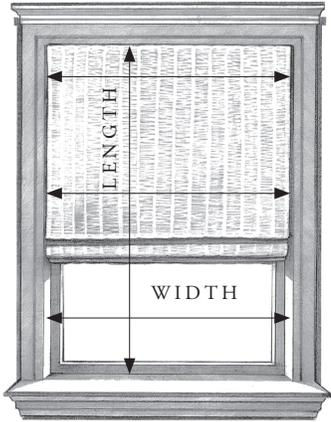

Inside mount

## OUTSIDE MOUNT

With a steel tape, provide measurements of the exact finished width and length of the shade, including any overlap desired. All measurements should be rounded down to the nearest 1/8". No deductions will be taken from outside mount measurements. If mounting shades above door openings, be sure to allow room for L-brackets and shade stacking.

STANDARD FEATURES UNLESS OTHERWISE SPECIFIED:  
• Headerboards 1"D or less are pre-drilled front to back. Mounting screws are provided  
• Headerboards over 1"D are not pre-drilled and L-brackets approximately the same size as the headerboard depth are provided

## CEILING MOUNT

State whether inside (IM) or outside (OM) mount and refer to above instructions.

STANDARD FEATURES UNLESS OTHERWISE SPECIFIED:  
• Headerboards are pre-drilled bottom to top for easy installation. Mounting screws are provided