



HANDWOVEN WINDOW COVERINGS

ROMAN FOLD SHADE HOW TO MEASURE


INSIDE MOUNT

Measure width at inside top, middle and bottom of window opening with a steel tape. Use the narrowest width measurement (round down to the nearest 1/8").

Measure length from inside top of window to bottom sill and provide measurements (round down to the nearest 1/8"). No deductions will be taken from length measurement.

STANDARD FEATURES UNLESS OTHERWISE SPECIFIED:
• Headerboards are pre-drilled bottom to top for easy installation. Mounting screws are provided

DESIGN NOTE:
For operating clearance, it's necessary to weave inside mount shades 1/2" narrower than the inside window measurement (1/4" for each side).
On order form, please state if you "have taken 1/2" deduction" or "exact window opening, CONRAD to take deductions."

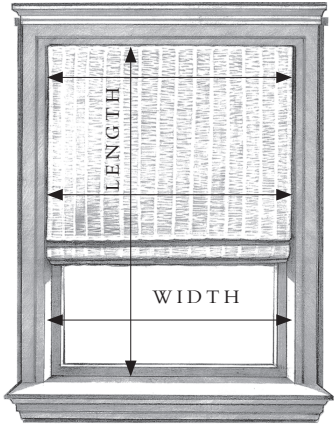

Inside mount

OUTSIDE MOUNT

With a steel tape, provide measurements of the exact finished width and length of the shade, including any overlap desired. All measurements should be rounded down to the nearest 1/8". No deductions will be taken from outside mount measurements. If mounting shades above door openings, be sure to allow room for L-brackets and shade stacking.

STANDARD FEATURES UNLESS OTHERWISE SPECIFIED:
• Headerboards 1"D or less are pre-drilled front to back. Mounting screws are provided
• Headerboards over 1"D are not pre-drilled and L-brackets approximately the same size as the headerboard depth are provided

CEILING MOUNT

State whether inside (IM) or outside (OM) mount and refer to above instructions.

STANDARD FEATURES UNLESS OTHERWISE SPECIFIED:
• Headerboards are pre-drilled bottom to top for easy installation. Mounting screws are provided